




CHANNEL CHANGING INSTRUCTIONS FOR

DOSS UB101 WIRELESS BELT-PACK TRANSMITTER

1. To start please turn the unit on by pushing and holding the “POWER” button until the LCD screen turns on.

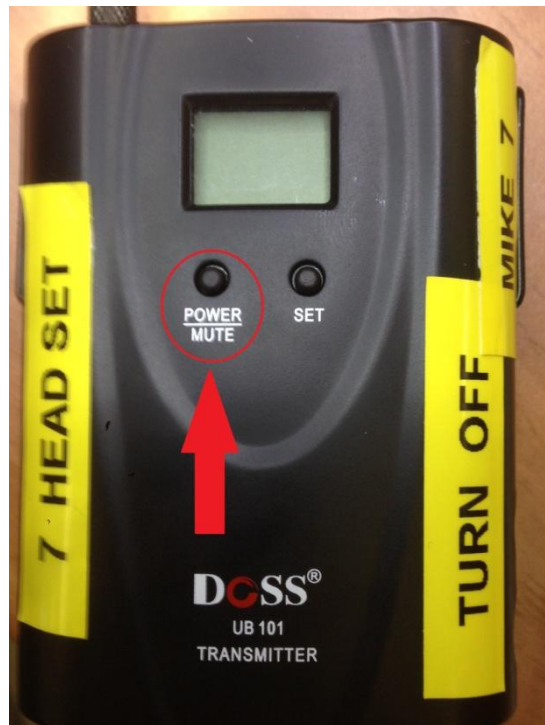


- Once power is on your screen should look like this with the "PADLOCK" in the right corner of the LCD screen showing its self **UNLOCKED**. You cannot change the channel if the "PADLOCK" is locked.



- To change the channel on the transmitter please hold the "SET" button until the channel number is **FLASHING**. You must select the new channel while the number is flashing, it will only flash for **7 SECONDS**.




4. While the channel number is flashing keep pushing the "SET" button until you reach your desired channel. (Channel 6 is shown as an example).

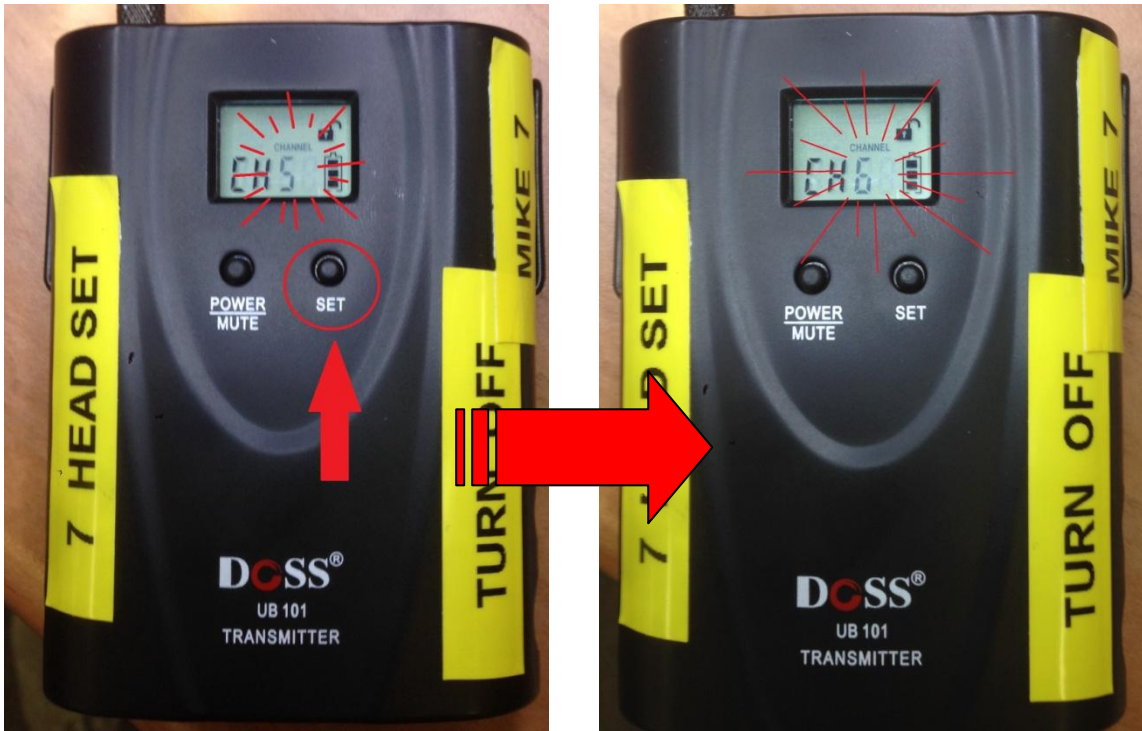

5. Once your desired channel number is on the screen push the "POWER" and "SET" buttons **TOGETHER** to set the channel number. The number will now **STOP** flashing.



6. To **LOCK** the channel number in push the “POWER” and “SET” buttons **TOGETHER AGAIN**. This should now show the “PADLOCK” **LOCKED**. Now the channel number cannot be changed until you unlock the “PADLOCK” or reset the unit.

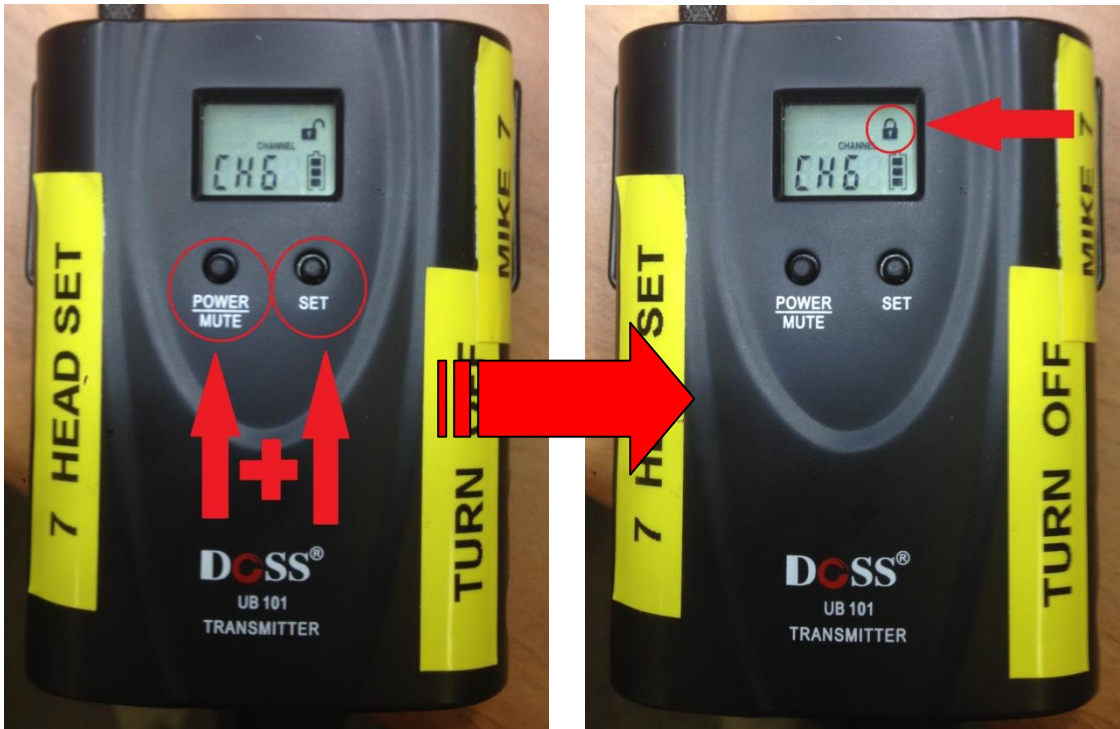

P.S. If you accidentally **LOCK** the wrong channel simply push the “POWER” and “SET” buttons **TOGETHER** to unlock the “PADLOCK”. Now you can hold “SET” to change the channel again.

RADIO PARTS GROUP

562 SPENCER STREET

WEST MELBOURNE

1800 337 366

INFO@RADIOPARTS.COM.AU