



Introduction

Thank you for purchasing the DOSS SoundBox Wireless Portable Bluetooth Speaker. Bluetooth will provide the freedom we desire. We encourage you to explore the innovative wireless portable speaker.

Package content

- One wireless portable speaker
- USB Type-C charging cable
- 3.5mm auxiliary cable
- User Manual

Product overview

1. Mode switch
2. Bluetooth mode/TF mode touch
3. Play/Pause and Volume buttons
4. LED indicator
5. Battery status indicator

Backlit touch-sensitive buttons

- Mode switch: Touch **MODE** to toggle play mode among Bluetooth, TF card and AUX.
- Bluetooth mode/TF mode touch: touch **▶** to skip backward.
- Play/Pause and Volume buttons: In Bluetooth mode, touch **▶** to answer or end a call. Touch for 3 seconds to repeat a call. In Bluetooth mode, touch **▶** to play/pause your tune. Touch for 3 seconds to repeat a song. In TF mode, touch **▶** to skip forward.
- Volume control: In Bluetooth mode/TF mode, touch **▶** to increase volume. In TF mode, touch **▶** to decrease volume.
- Click twice to increase the volume.
- Click twice to decrease the volume.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Preparation

- Use the supplied USB Type-C cable to charge your portable speaker directly from your computer without the need for an external power source.
- Make sure that the speaker is fully charged before using for the first time. It will take approximately 2-3 hours to recharge after a full charge.
- LED will remain red when the device is fully charged.

Answering and ending a call using your speaker or mobile phone

- When there is an incoming call, the speaker will generate a tone and a visual indication to answer the call.
- When you receive a call, press the **▶** button to answer the call. You may also press the answer button on your smart phone to take the call.
- Press a clear voice right into the built-in microphone located on the top of the speaker to answer the call.
- To end a call, tap the **▶** button once again. Likewise, you may also end the call directly using your smart phone call button.
- When listening to music using your smart phone, playback will resume automatically once the call ends.

Using it with your Echo Dot

- When you connect the DOSS speaker using a 3.5mm audio cable of Bluetooth, you can connect it to the Bluetooth AUX cable. It can only transmit sound signal.
- To remove the battery cover option, please contact our customer service to remove the function by upgrading the firmware.

Pairing the wireless speaker with your smart device

- Place your smart device and wireless speaker on each other nearby.
- Press the power button located on the back of the speaker for several seconds to turn it on.
- Press the power button to "discover" the wireless speaker. Upon powering on, a tone will be heard, the LED will start flashing, indicating a prompt to connect. The speaker has entered into the pairing mode.
- Enabled Bluetooth on your device and choose DOSS SoundBox from the list.
- Press a clear voice right into the built-in microphone located on the top of the speaker to answer the call.

Bluetooth

Problem	Solution
Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
The speakers cut off during playback	Check whether the speaker is connected to the correct device.
There's a noise during playback	Mode is caused by the interference of charging to avoid it, please disconnect the charging cable and try again.
Laptop prompts to install driver	The driver isn't installed for SoundBox TF for laptop. Please install the driver from the computer company website.
Not paired with transmitter	Please press Play/Pause button for 5 seconds to reset the transmitter.

TF Card

Problem	Solution
The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.

Other

Problem	Solution
All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Troubleshooting

Bluetooth	Problem	Solution
Bluetooth	Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
	Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
TF Card	The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
	The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
Other	The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.
	All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Product specifications

Product Type: Wireless Portable Bluetooth Speaker with Built-in Microphone
Output Power: 5W
Driver unit: 1.5 inch speaker + 2 x 2.6 inch passive radiator
Frequency response: 100Hz-18kHz
Signal-to-noise ratio: >65dB
Total harmonic distortion: <1%
Impedance: 16Ω
Dimensions: 6.6 x 2.7 x 2.9 inch
Weight: 1.1lb

Power

- Battery type: Li-ion 3.7V, 2200mAh
- Rated power: 5W
- Charging time: 2-3 hours (approximately when fully charged)
- Playback time: up to 20 hours (duration time may vary depending on the volume level and usage pattern).

Wireless/Networking

- Bluetooth specification: V4.0/EDR, backward compatible with previous versions
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33ft

Warning

- DO NOT drop, hit or abuse the device.
- DO NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- DO NOT use cleaning product that contain benzene, solvent or alcohol.
- DO NOT expose the Bluetooth speaker to excessive heat or to direct sunlight for long periods of time.
- DO NOT store the device in a place with high humidity or dust.
- DO NOT place heavy objects on top of the Bluetooth speaker.
- DO NOT use near a microwave oven or wireless LAN products.

Eineleitung

Vielen Dank, dass Sie sich für den DOSS SoundBox Wireless Portable Bluetooth Lautsprecher mit Bluetooth und Freisprechfunktion entschieden haben. Wir empfehlen Ihnen diese Bedienungsanleitung aufmerksam zu lesen, um den Leistungsvorteil von diesem innovativen Lautsprecher zu vollumfänglich zu nutzen.

Lieferumfang

- 1x kabellos tragbarer Lautsprecher
- 1x USB Typ-C Ladekabel
- 1x 3,5 mm Aux-Kabel
- 1x Bedienungsanleitung

Übersicht

1. Modus-Schalter
2. Bluetooth-Modus/TF-Modus-Taste
3. Play/Pause und Lautstärke-Tasten
4. LED-Indikator
5. Batteriestatus-Indikator

Hintergrundleuchtete, berührungsempfindliche Tasten

- Modus-Schalter: Berühren Sie **MODE**, um zwischen Bluetooth, Bluetooth, TF-Karte und Line-In zu wechseln.
- Bluetooth-Modus/TF-Modus-Taste: Berühren Sie **▶** zum Zurück- oder Sprung.
- Bluetooth-Modus: Berühren Sie **▶** zum Beantworten einer Anruf oder zum Beenden eines Anrufs.
- Bluetooth-Modus: Berühren Sie **▶** zum Beantworten eines Anrufs oder zum Beenden eines Anrufs.
- Bluetooth-Modus: Berühren Sie **▶** zum Beantworten eines Anrufs oder zum Beenden eines Anrufs.
- Bluetooth-Modus: Berühren Sie **▶** zum Beantworten eines Anrufs oder zum Beenden eines Anrufs.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Vorbereitung

- Verwenden Sie das mitgelieferte USB Type-C-Kabel, um Ihren tragbaren Lautsprecher direkt von Ihrem Computer oder einem anderen Gerät mit einem Mikro-USB-Anschluss aufzuladen.
- Stellen Sie sicher, dass der Lautsprecher vollständig aufgeladen ist, bevor Sie ihn zum ersten Mal verwenden.
- Die Batterie des Lautspeakers ist vollständig aufgeladen, wenn das LED-Licht grün leuchtet. Es dauert etwa 2-3 Stunden, um die Batterie wieder voll aufzuladen.
- Wenn Sie den Lautsprecher verwenden, wird ein rotes Licht an der LED-Leuchte leuchten. Wenn die Batterie empfindlich reagiert, haben Sie die Ein-/Aussteuer erneut zu betätigen.

Anruf annehmen und beenden, wenn Sie den Lautsprecher zum Freisprechen nutzen

- Wenn Sie einen eingehenden Anruf empfangen, erzeugt der Lautsprecher einen Ton und eine visuelle Benachrichtigung, um Sie über dieses Ereignis zu informieren.
- Wenn Sie einen Anruf empfangen, drücken Sie den **▶** -Taste, um den Anruf zu beantworten. Sie können auch den **▶** -Taste auf dem Smartphone drücken, um den Anruf zu beantworten.
- Drücken Sie die **▶** -Taste, um den Anruf zu beenden.
- Wenn Sie einen Anruf empfangen, drücken Sie erneut auf die Taste **▶**. Natürlich können Sie auch den **▶** -Taste auf dem Smartphone drücken, um den Anruf zu beenden.
- Wenn Sie Ihren Smartphone-Microphone, wird die Webdiagnose für den Anruf automatisch aktiviert.

Verwendung mit Ihrem Echo Dot

- Wenn Sie Ihren Echo Dot über ein 3,5-mm-AUX-Kabel oder über Bluetooth mit dem Lautsprecher verbinden, können Sie den Lautsprecher auch mit einem Bluetooth-Verbindungsgerät verbinden.
- Legen Sie die Alexa App herunter und folgen Sie den Standard-Schritten, um die Verbindung herzustellen.
- Wenn Sie die Alexa App heruntergeladen haben, drücken Sie auf den Schalter "Lautsprecher mit Bluetooth verbinden".
- Drücken Sie auf "Lautsprecher mit Bluetooth verbinden".
- Drücken Sie auf "Lautsprecher mit Bluetooth verbinden".

Bluetooth

Problem	Solution
Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
The speakers cut off during playback	Check whether the speaker is connected to the correct device.
There's a noise during playback	Mode is caused by the interference of charging to avoid it, please disconnect the charging cable and try again.
Laptop prompts to install driver	The driver isn't installed for SoundBox TF for laptop. Please install the driver from the computer company website.
Not paired with transmitter	Please press Play/Pause button for 5 seconds to reset the transmitter.

TF Card

Problem	Solution
The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.

Other

Problem	Solution
All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Troubleshooting

Bluetooth	Problem	Solution
Bluetooth	Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
	Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
TF Card	The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
	The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
Other	The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.
	All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Produkt Spezifikationen

Produkttyp: Kabellos, tragbarer Bluetooth-Lautsprecher mit eingebautem Mikrofon
Ausgangsleistung: 2 x 6 W
Treiber: 2 x 1,5-Zoll-Sprecher + 2 x 2,6-Zoll-Passivlautsprecher
Frequenzgang: 100Hz-18kHz
Signal-Rausch-Verhältnis: >65 dB
Gesamtwirkungsgrad: 6.6 x 2.7 x 2.9 cm
Gewicht: 502 g
Abmessungen: 6.6 x 2.7 x 2.9 cm
Garantie: 1 Jahr begrenzt

Stromversorgung

- Batterie-Typ: Li-Ion 3.7V / 2200mAh
- Leistung: 5W
- Ladungszeit: 2-3 Stunden (abhängig von der Akku-Ladung)
- Wiedergabezeit: bis zu 20 Stunden (abhängig von der Lautstärke und anderen Umständen)

Kabellose Verbindungen

- Bluetooth: V4.0/EDR, Abwärtskompatibel mit vorherigen Bluetooth-Versionen.
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 Meter / 33 ft

Warnung

- Vermeiden Sie es, das Gerät nicht fallen, schlagen oder stürzen Sie es nicht.
- Zwingen, reparieren oder modifizieren Sie das Bluetooth-Lautsprecher NICHT selbst.
- Vermeiden Sie es, das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Gerät NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.
- Vermeiden Sie das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Bluetooth-Lautsprecher NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.

Introduction

Merci d'avoir acheté le haut-parleur DOSS SoundBox sans fil Portable Bluetooth et fonction mains libres. Nous vous recommandons de lire attentivement le guide d'instructions pour tirer le meilleur parti de ce haut-parleur innovant portable sans fil.

Contenu du paquet

- 1x haut-parleur portable sans fil
- 1x câble de chargement USB Type-C
- 1x câble auxiliaire 3,5 mm
- 1x mode d'emploi

Présentation du produit

1. Commutateur de mode: Touchez **MODE** pour basculer entre les modes Bluetooth, TF, Carte et Aux.- Mode Bluetooth/TF: Touchez **▶** pour sauter en arrière.
- Mode Bluetooth/TF: Touchez **▶** pour sauter en avant.
- Mode Bluetooth: Touchez **▶** pour répondre ou mettre fin à un appel.
- Mode Bluetooth: Touchez **▶** pour répondre ou mettre fin à un appel.
- Mode Bluetooth: Touchez **▶** pour répondre ou mettre fin à un appel.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

IV. Préparation

- Utilisez le câble USB Type-C fourni pour charger votre haut-parleur portable sans fil directement de votre ordinateur ou d'un autre appareil compatible sans fil.
- Assurez-vous que le haut-parleur est complètement chargé avant de l'utiliser la première fois.
- Le LED restera rouge lorsque le haut-parleur est complètement chargé.

Appel d'attente et fin d'un appel en utilisant votre haut-parleur ou votre téléphone mobile

- Quand vous recevez un appel, le haut-parleur génère un son et une indication visuelle pour répondre à l'appel.
- Appuyez sur le bouton de réponse ou sur le bouton de fin d'appel sur votre téléphone pour répondre à l'appel.
- Appuyez sur le bouton de fin d'appel sur votre téléphone pour répondre à l'appel.

Bluetooth

Problem	Solution
Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
The speakers cut off during playback	Check whether the speaker is connected to the correct device.
There's a noise during playback	Mode is caused by the interference of charging to avoid it, please disconnect the charging cable and try again.
Laptop prompts to install driver	The driver isn't installed for SoundBox TF for laptop. Please install the driver from the computer company website.
Not paired with transmitter	Please press Play/Pause button for 5 seconds to reset the transmitter.

TF Card

Problem	Solution
The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.

Other

Problem	Solution
All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Spezifikationen des Produkts

Produkttyp: Kabellos, tragbarer Bluetooth-Lautsprecher mit eingebautem Mikrofon
Ausgangsleistung: 2 x 6 W
Treiber: 2 x 1,5-Zoll-Sprecher + 2 x 2,6-Zoll-Passivlautsprecher
Frequenzgang: 100Hz-18kHz
Signal-Rausch-Verhältnis: >65 dB
Gesamtwirkungsgrad: 6.6 x 2.7 x 2.9 cm
Gewicht: 502 g
Abmessungen: 6.6 x 2.7 x 2.9 cm
Garantie: 1 Jahr begrenzt

Stromversorgung

- Batterie-Typ: Li-Ion 3.7V, 2200mAh
- Leistung: 5W
- Ladungszeit: 2-3 Stunden (abhängig von der Akku-Ladung)
- Wiedergabezeit: bis zu 20 Stunden (abhängig von der Lautstärke und anderen Umständen)

Kabellose Verbindungen

- Bluetooth: V4.0/EDR, Abwärtskompatibel mit vorherigen Bluetooth-Versionen.
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 Meter / 33 ft

Warnung

- Vermeiden Sie es, das Gerät nicht fallen, schlagen oder stürzen Sie es nicht.
- Zwingen, reparieren oder modifizieren Sie das Bluetooth-Lautsprecher NICHT selbst.
- Vermeiden Sie es, das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Gerät NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.
- Vermeiden Sie das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Bluetooth-Lautsprecher NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.

Introduction

Gracias por haber adquirido el altavoz DOSS SoundBox Wireless Portable Bluetooth Speaker con tecnología Bluetooth y manos libres. Le recomendamos que lea atentamente el manual de instrucciones para aprovechar al máximo este innovador altavoz portátil inalámbrico.

Contenido del paquete

- 1x altavoz portátil inalámbrico
- 1x cable de carga USB Type-C
- 1x cable auxiliar de 3,5 mm
- 1x manual de usuario

Panel de botones táctiles

1. Modo switch: Toque **MODE** para cambiar el modo de reproducción entre Bluetooth, TF, tarjeta de memoria y modo AUX.- Modo Bluetooth/TF: Toque **▶** para saltar hacia atrás.
- Modo Bluetooth/TF: Toque **▶** para saltar hacia adelante.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Introduction

Gracias por haber adquirido el altavoz DOSS SoundBox Wireless Portable Bluetooth Speaker con tecnología Bluetooth y manos libres. Le recomendamos que lea atentamente el manual de instrucciones para aprovechar al máximo este innovador altavoz portátil inalámbrico.

Contenido del paquete

- 1x altavoz portátil inalámbrico
- 1x cable de carga USB Type-C
- 1x cable auxiliar de 3,5 mm
- 1x manual de usuario

Panel de botones táctiles

1. Modo switch: Toque **MODE** para cambiar el modo de reproducción entre Bluetooth, TF, tarjeta de memoria y modo AUX.- Modo Bluetooth/TF: Toque **▶** para saltar hacia atrás.
- Modo Bluetooth/TF: Toque **▶** para saltar hacia adelante.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Preparación

- Utilice el cable USB Type-C que se incluye en el paquete para cargar el altavoz portátil inalámbrico directamente desde su ordenador o cualquier otro dispositivo con un puerto compatible.
- Asegúrese de que el altavoz está completamente cargado antes de usarlo por primera vez.
- El LED permanecerá rojo cuando el altavoz esté completamente cargado.

Responder y terminar llamadas utilizando su altavoz o su teléfono móvil

- Cuando hay una llamada entrante, el altavoz generará un tono y una indicación visual para responder a la llamada.
- Al presionar el botón de respuesta o el botón de fin de llamada en su teléfono, podrá responder a la llamada.
- Al presionar el botón de fin de llamada en su teléfono, podrá responder a la llamada.

Bluetooth

Problem	Solution
Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
The speakers cut off during playback	Check whether the speaker is connected to the correct device.
There's a noise during playback	Mode is caused by the interference of charging to avoid it, please disconnect the charging cable and try again.
Laptop prompts to install driver	The driver isn't installed for SoundBox TF for laptop. Please install the driver from the computer company website.
Not paired with transmitter	Please press Play/Pause button for 5 seconds to reset the transmitter.

TF Card

Problem	Solution
The speaker do not play when the card is inserted	Check whether the card format is FAT or FAT32. If not, format the card to FAT32.
The speaker do not play when the card is inserted	Check the song format. The speaker only supports MP3, WAV format.
The song cuts off during playback	There may be problem with the song file. The deleting of the songs in the card.

Other

Problem	Solution
All the lights are on and can't be turned off	Use the mode key to stop the next button mode Auto.

Spezifikationen des Produkts

Produkttyp: Kabellos, tragbarer Bluetooth-Lautsprecher mit eingebautem Mikrofon
Ausgangsleistung: 2 x 6 W
Treiber: 2 x 1,5-Zoll-Sprecher + 2 x 2,6-Zoll-Passivlautsprecher
Frequenzgang: 100Hz-18kHz
Signal-Rausch-Verhältnis: >65 dB
Gesamtwirkungsgrad: 6.6 x 2.7 x 2.9 cm
Gewicht: 502 g
Abmessungen: 6.6 x 2.7 x 2.9 cm
Garantie: 1 Jahr begrenzt

Stromversorgung

- Batterie-Typ: Li-Ion 3.7V, 2200mAh
- Leistung: 5W
- Ladungszeit: 2-3 Stunden (abhängig von der Akku-Ladung)
- Wiedergabezeit: bis zu 20 Stunden (abhängig von der Lautstärke und anderen Umständen)

Kabellose Verbindungen

- Bluetooth: V4.0/EDR, Abwärtskompatibel mit vorherigen Bluetooth-Versionen.
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 Meter / 33 ft

Warnung

- Vermeiden Sie es, das Gerät nicht fallen, schlagen oder stürzen Sie es nicht.
- Zwingen, reparieren oder modifizieren Sie das Bluetooth-Lautsprecher NICHT selbst.
- Vermeiden Sie es, das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Gerät NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.
- Vermeiden Sie das Bluetooth-Lautsprecher nicht über längere Zeiträume übermäßig heiß oder direkter Sonneneinstrahlung aus.
- Vermeiden Sie das Bluetooth-Lautsprecher NICHT in der Nähe von Hochleistungsgeräten oder Alkohol.

Introduction

Gracias por haber adquirido el altavoz DOSS SoundBox Wireless Portable Bluetooth Speaker con tecnología Bluetooth y manos libres. Le recomendamos que lea atentamente el manual de instrucciones para aprovechar al máximo este innovador altavoz portátil inalámbrico.

Contenido del paquete

- 1x altavoz portátil inalámbrico
- 1x cable de carga USB Type-C
- 1x cable auxiliar de 3,5 mm
- 1x manual de usuario

Panel de botones táctiles

1. Modo switch: Toque **MODE** para cambiar el modo de reproducción entre Bluetooth, TF, tarjeta de memoria y modo AUX.- Modo Bluetooth/TF: Toque **▶** para saltar hacia atrás.
- Modo Bluetooth/TF: Toque **▶** para saltar hacia adelante.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Introduction

Gracias por haber adquirido el altavoz DOSS SoundBox Wireless Portable Bluetooth Speaker con tecnología Bluetooth y manos libres. Le recomendamos que lea atentamente el manual de instrucciones para aprovechar al máximo este innovador altavoz portátil inalámbrico.

Contenido del paquete

- 1x altavoz portátil inalámbrico
- 1x cable de carga USB Type-C
- 1x cable auxiliar de 3,5 mm
- 1x manual de usuario

Panel de botones táctiles

1. Modo switch: Toque **MODE** para cambiar el modo de reproducción entre Bluetooth, TF, tarjeta de memoria y modo AUX.- Modo Bluetooth/TF: Toque **▶** para saltar hacia atrás.
- Modo Bluetooth/TF: Toque **▶** para saltar hacia adelante.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.
- Modo Bluetooth: Toque **▶** para responder o finalizar una llamada.

Power Button

1. Press the power button to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Status indicators

Flashing blue	Indicates that the speaker has entered into the pairing mode and it's ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary input mode
Steady Green	Indicates that the device has switched to the TF mode
Steady red	Battery is charging
Steady green	Battery is fully charged

Center indicator/ Indicator button

1. Power Button: Long press **▶** to turn the device on and off. **▶** **Auxiliary 0.5mm Jack**: Use it for cabled playback with compatible devices.

Charging port

1. Plug the supplied USB Type-C cable into the port to recharge the built-in battery. **▶** **Charging**: Steady Red. **▶** **Full charged**: Steady Green.

Preparación

- Utilice el cable USB Type-C que se incluye en el paquete para cargar el altavoz portátil inalámbrico directamente desde su ordenador o cualquier otro dispositivo con un puerto compatible.
- Asegúrese de que el altavoz está completamente cargado antes de usarlo por primera vez.
- El LED permanecerá rojo cuando el altavoz esté completamente cargado.

Responder y terminar llamadas utilizando su altavoz o su teléfono móvil

- Cuando hay una llamada entrante, el altavoz generará un tono y una indicación visual para responder a la llamada.
- Al presionar el botón de respuesta o el botón de fin de llamada en su teléfono, podrá responder a la llamada.
- Al presionar el botón de fin de llamada en su teléfono, podrá responder a la llamada.

Bluetooth

Problem	Solution
Can't hear with Bluetooth devices	Press the power button 5 seconds, the LED will have a try for 4 seconds.
Can't hear with Bluetooth devices	Please reset "DOSS SoundBox" as the default playback device.
The speakers cut off during playback	Check whether the speaker is