

# **Q4K-R1**

## **Country Setup Change Instruction**


## Q4K-R1 – Country Setup Change Instruction

**Q4K-R1 is factory set to Australia of its country setup, and running the Australian DVB-T channel plan. Follow instructions below to switch country to New Zealand and running the NZ DVB-T channel plan.**


**There are two approaches: Via web interface, or via front panel control button.**

### A. Via Web Interface:

1. Connect to the Web UI of the unit.
2. Go to Administration Page, and hit the Reset to Default button.

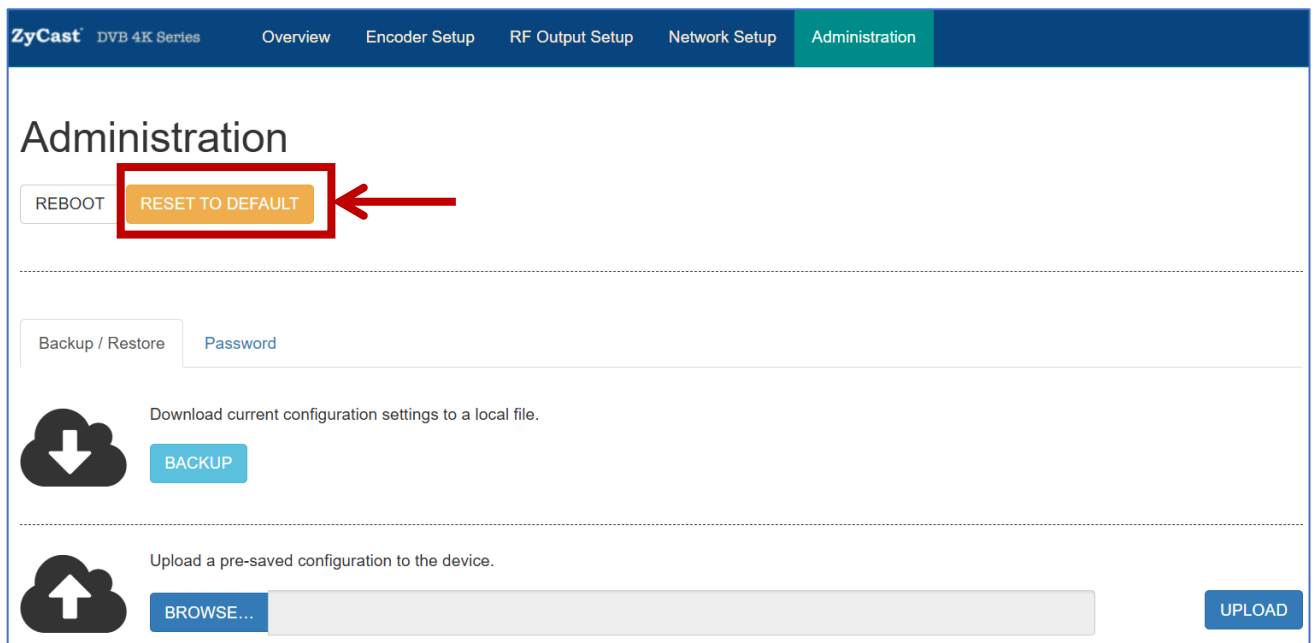

3. A pop-up message will show up, select "New Zealand."

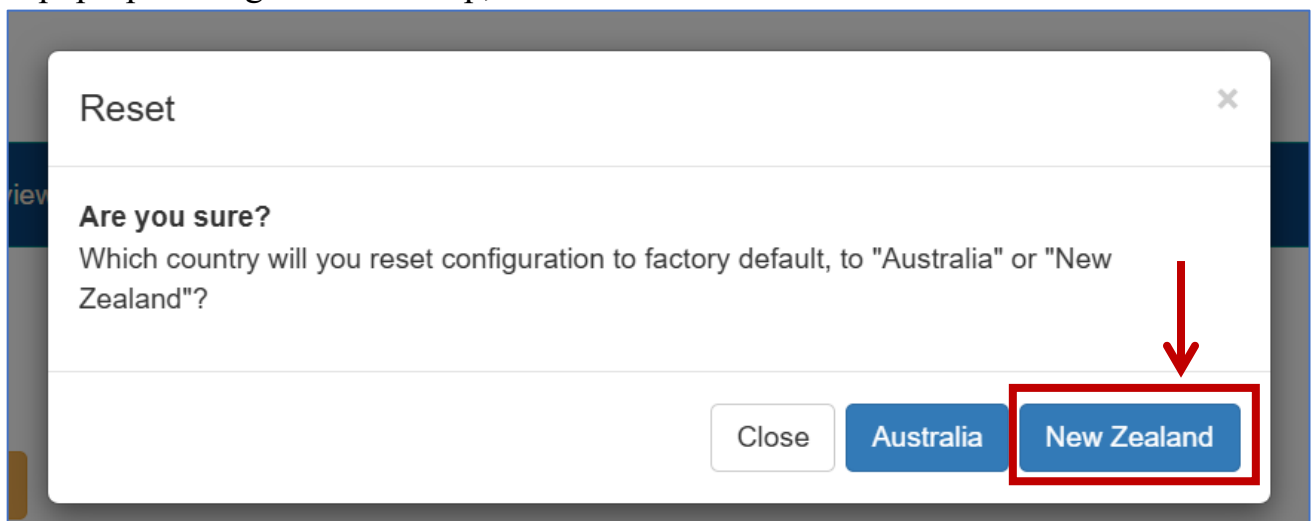

4. The unit will reboot itself, and running the NZ DVB-T channel plan.

**B. Via Control Buttons on Front Panel:**

1. Use the control buttons on the front panel to change the country setup.



2. Unplug power jack from the unit.
3. Hold down arrow Up and Down buttons at the same time.
4. Continue to hold the buttons down while plug in the power jack and wait for the unit to boot up.
5. Release the buttons when LCD message shows “Reset to Default.” And then hit OK button.



6. Wait for a moment. LCD will then show message “System Setup – Country.”



7. Hit OK button to enter the menu. Message “Country – Australia” will be displayed.



8. Hit Up or Down button to select country “New Zealand”. And then hit OK button to confirm.



9. Hit Up or Down button and select the ‘Save & Exit’ option. Hit OK button to confirm.



10. Wait a few moments, the LCD will display “ZyCast HD Series” and then HDMI status and RF output status.



11. Country Setup has been changed successfully. Unit now running NZ DVB-T channel plan.

## RF Output Setup

This page allows the user to configure the RF settings. Enter/Select the required settings for each RF Channel. Use the **Save and Confirm** button to save any changes made.

ONID	NID	TSID	Network Name	RF	Channel (Frequency)	BW (MHz)	Constellation	FEC	Guard Interval	OFDM Mode	CELL ID	Bit Rate Mbps
8746	13313	101	ZyCast	Normal	S31 (386.0 MHz)	8	64 QAM	7/8	1/32	8k	0	13.600/31.668

- S16 (268.5 MHz)
- S17 (275.5 MHz)
- S18 (282.5 MHz)
- S19 (289.5 MHz)
- S20 (296.5 MHz)
- S21 (306.0 MHz)
- S22 (314.0 MHz)
- S23 (322.0 MHz)
- S24 (330.0 MHz)
- S25 (338.0 MHz)
- S26 (346.0 MHz)
- S27 (354.0 MHz)
- S28 (362.0 MHz)
- S29 (370.0 MHz)
- S30 (378.0 MHz)
- S31 (386.0 MHz)

© 2012 ZyCast Technology Inc. ALL RIGHTS RESERVED