

DVR USER' S MANUAL

Version 3.0

Contents

1. Startup 、 Shutdown 、 Reboot and Lock.....	3
2. Live Preview.....	3
3. Configuring Settings for Recording.....	5
3.1 Initializing Record Settings.....	Error! Bookmark not defined.
3.2 Scheduling a Recording.....	Error! Bookmark not defined.
<u>3.3 Starting a Manual Recording</u>	<u>8</u>
<u>3.4 Playing Back a Recording.....</u>	<u>9</u>
<u>3.5 Backing up record files.....</u>	<u>11</u>
3.6 Configuring Alarms.....	11
3.7 Configing Network Settings.....	20

Startup 、 Shutdown 、 Reboot and Lock

Startup in menu

Proper startup and shutdown procedures are crucial to expanding the life of your DVR.

To startup your DVR:

1. login :default user:admin default password:null
2. Ensure the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the unit.
3. Turn on the switch on rear panel
4. After startup, the Status indicator LED will remain green.

Shutdown in Menu

1. Enter the Shutdown menu, shown in Figure 1 by clicking on Menu > Shutdown.
2. Select the Shutdown button.
3. Turn off switch on rear panel.

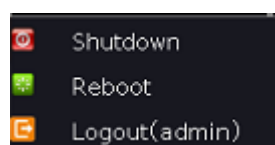


Figure 1

While in the Shutdown menu, you may also reboot or lock your DVR. Locking your DVR will return you to the Live Preview mode, which will require an user name and password to exit out of it. The Reboot button will reboot your DVR.

To reboot or lock your DVR:

1. Enter the Shutdown menu by clicking Menu > Shutdown.
2. Select the Lock button to lock the DVR or the Reboot button to reboot the DVR.

Live Preview

The Live Preview mode is automatically started after the DVR boots up.



Figure 2

The menu structure is as followed:

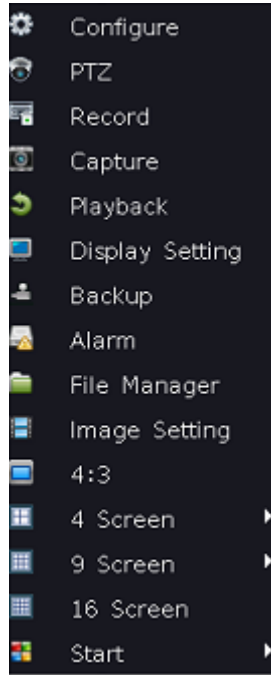


Figure 3

Configuring Settings for Recording

There are multiple ways to setup your DVR for recording. They include setting up a recording schedule, triggering a recording by motion detection and/or a sensor alarm, and manually starting the recording.



Figure 4

Initializing Record Settings



Figure 5

Before setting your DVR up for recording, certain settings should be configured first. The steps to configuring these settings are:

1. If you have not initialized a HDD either through the Setup Wizard or through HDD management, you must do so before proceeding.
2. Navigate to Setting > Channel > Video You will be taken to the Record Settings menu, shown in Figure 6.

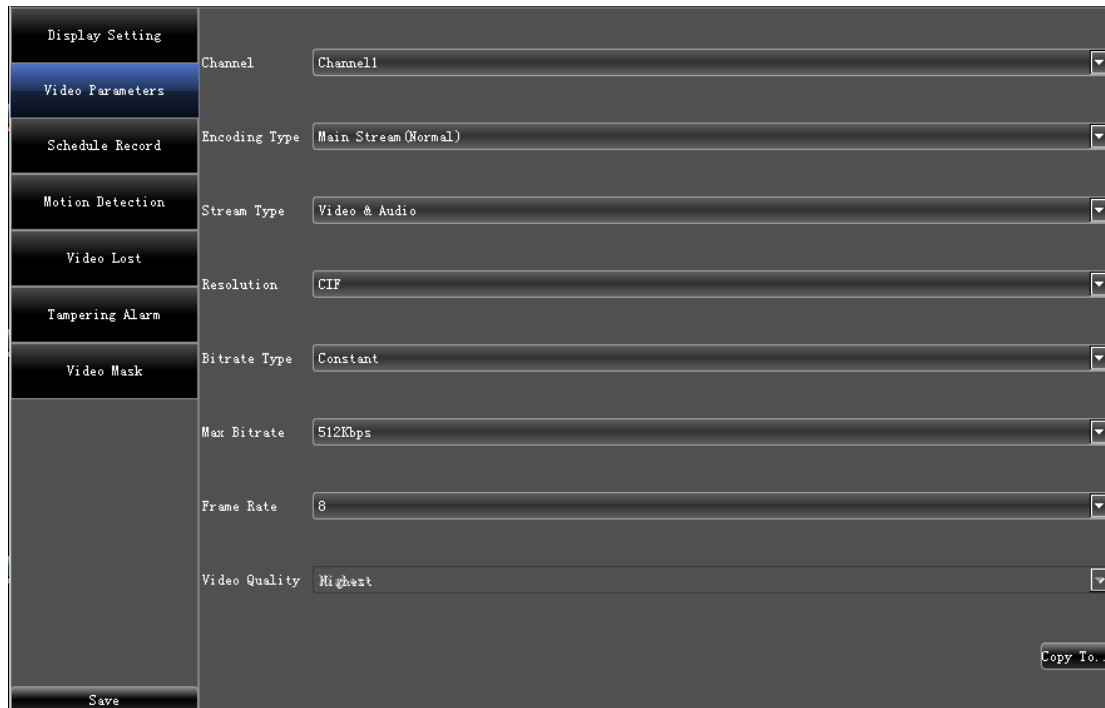


Figure 6

3. Select the channel you would to configure the settings for.
4. Configure settings for:
 - Encoding Parameters: Select the encoding parameters, either Normal or Event.
 - Stream Type: Type of stream to record, either video or video & audio.
 - Resolution: Select the resolution of the recording. The options include CIF and QCIF.
 - Bit Rate Type: Select either Variable or Constant bit rate.
 - Video Quality: Select the quality to record cameras at.
 - Frame Rate: Select recordings frame rate.
 - Max Bit Rate: Select or define custom maximum bit rate for recordings.

Scheduling a Recording

Scheduling a recording allows you to setup the DVR to only record when you want it to.

To setup a recording schedule:

1. Enter the Record Settings menu and select the Schedule tab to open the Schedule menu, (Setting > Channel > Schedule Record), shown in Figure 7.

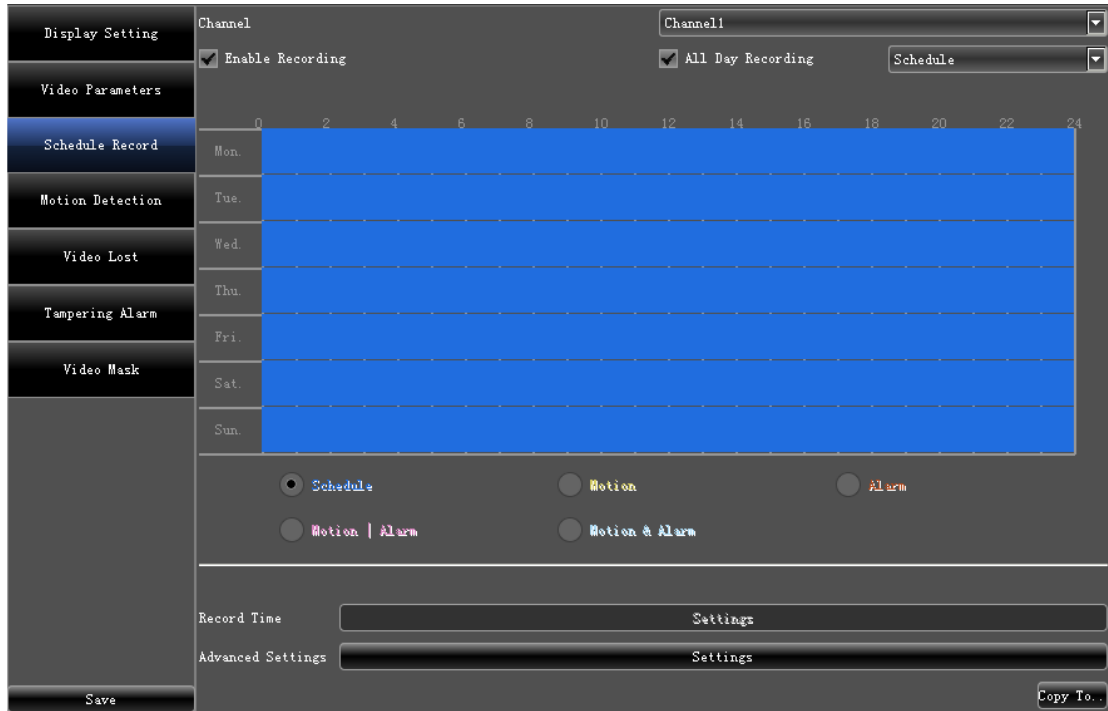


Figure 7.

2. Select Channel to edit schedule for.
3. Click and check Enable Schedule.
4. Click the Record Type you want (i.e. schedule);
5. Select the day you would like to setup the schedule for or select All Day Recording to record the entire week.
6. Select to record the entire day by clicking Setting after Record Time, up to 8 time periods can be scheduled. It is important to note that time periods cannot be overlapped.



Figure 8

7. Select a periods and click on Schedule, you can chose a recording Type. Recording type can be based on time and triggered by motion detection and/or alarm.
8. Click the OK button to finish configuration.
9. Repeat steps 3-9 for other channels or copy settings from one schedule to the next under the Copy To section.
10. Click OK to finish and save the schedule settings.

Starting a Manual Recording

A manual recording can be started at any time. To start a manual recording:

1. Press the REC/SHOT button on the front panel or in the Main menu to bring up the Record menu (shown in Figure 9).

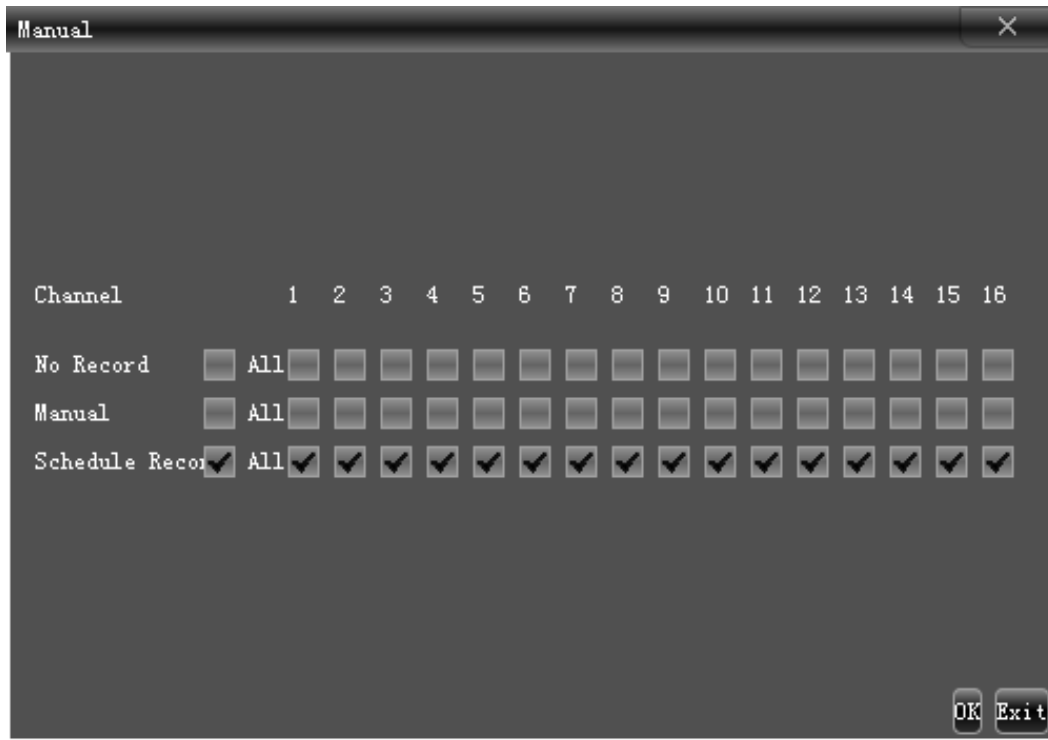


Figure 9

2. Start manual recording by selecting On or Off for the channels desired (default is Schedule record).

Playing Back a Recording

1. Enter into the Video Search menu by clicking Menu > Playback.
2. Select channel and date records you want to playback. (shown in Figure 10).

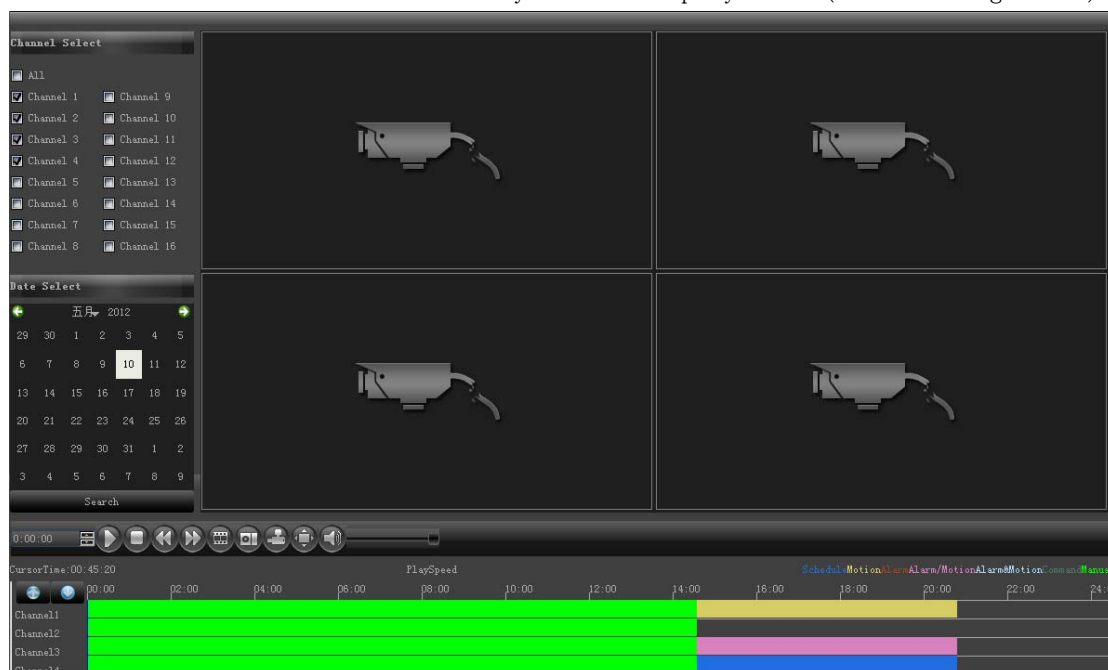


Figure 10

3. Click the Play button or double click on schedule below to start playback of all the files found.

Playing Back Frame-by-Frame

To playback frame-by-frame in the Playback interface: click the Frameplay button on the Playback Control Pane.

Using Digital Zoom

To use digital zoom in Playback mode: roll mousewheel on a desired magnification area, as shown in Figure 11. The selected area will be zoomed in.

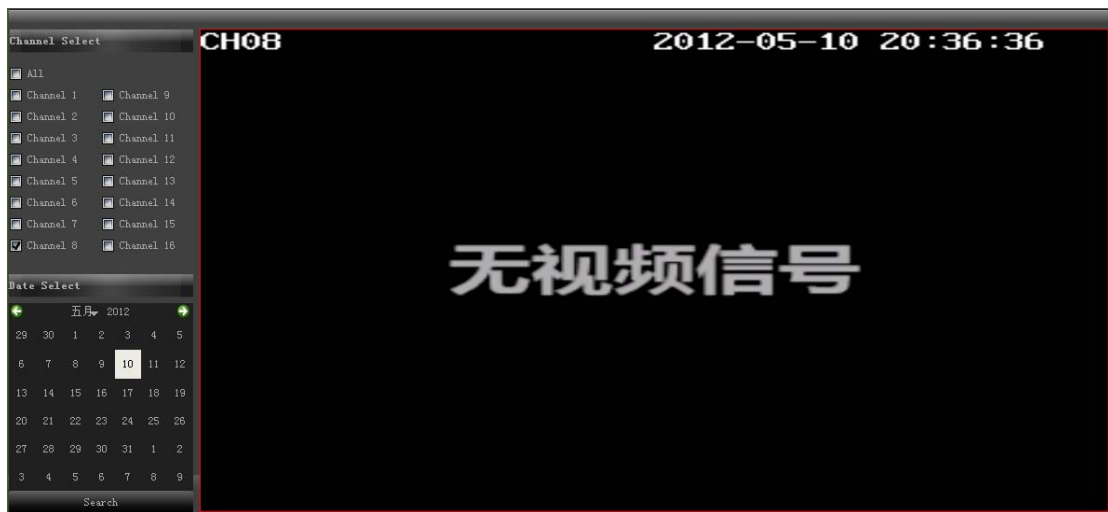


Figure 11-A

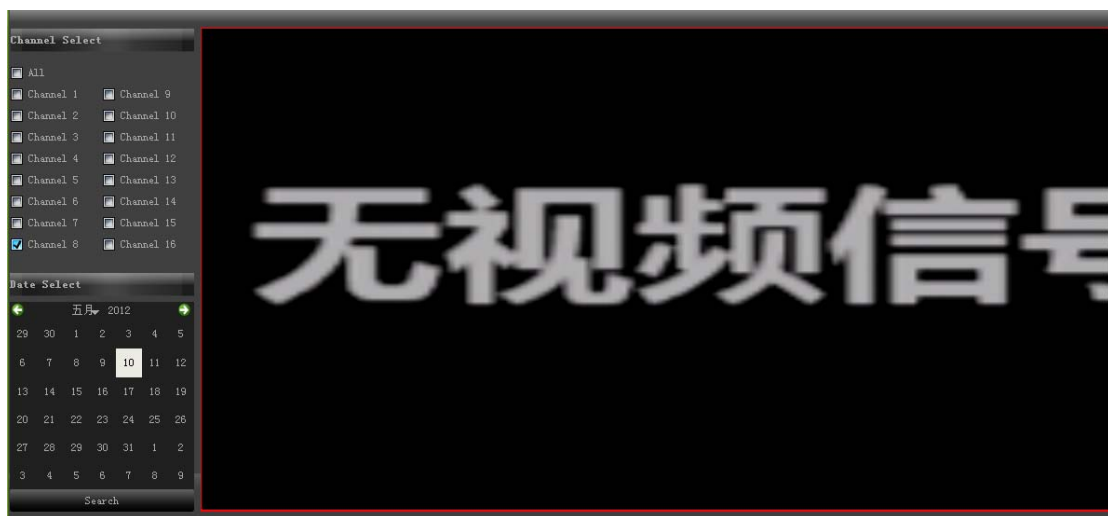


Figure 11-B

Backing up Recorded Files

Recorded files can be backed up to various devices, such as USB flash drives, USB HDDs.

Exporting Files To export recorded files:

1. Enter the Export Video menu (shown in Figure 12) by clicking Menu > backup.
2. Select desired parameters (i.e. channel no., start time and end time) to search for files to export.
3. Click the Refresh button.
4. The size of the currently selected files is displayed in the lower window.
5. Click Start to begin backup process, shown in Figure 12.



Figure 12

Configuring Alarms

Setting up Motion Detection

Set up properly, using motion detected recording will increase the number of days your DVR is able to record. It will only record relevant events rather than recording

everything, making searching for an event easier.

To set up motion detection:

1. Enter Channel Setting:

Enter the Channel Settings interface by navigating to Menu > Setting > Channel > Motion Detection. Select channel to configure motion detection on..



Figure 13

2. Click on Enable Motion Detection.

3. Click the Area Settings button to enter the Motion Detection area, shown in Figure 14.



Figure 14

4. The Motion Detection area, shown in Figure 14, allows you to mask out areas where you would like motion to be detected in. The maximum area is the whole screen. Mask

the Motion Detection area.

5. Click the Linkage Settings button to enter the Motion Detection linkage, shown in Figure 15.

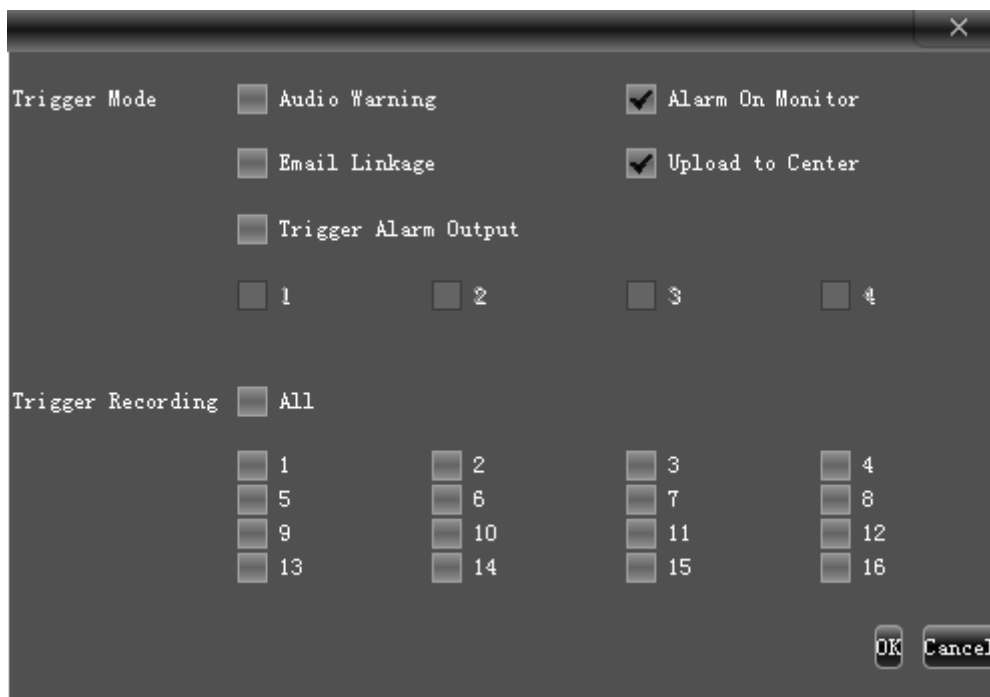


Figure 15

Detecting Video Loss

Your DVR can be setup to detect video loss and trigger an action. To setup video loss detection:

1. Enter Camera Settings menu by clicking Menu > Setting > Channel > Video Lost.
2. Select channel after Channel No. to configure video loss detection fo.
3. Check the Enable Video Loss checkbox to enable feature.
4. Check the Alm Schedule and Linkage tab to enable feature, as shown in Figure 16.



Figure 16

Detecting Video Tampering

Video tampering (i.e. moving camera to a different position) can also be detected and set to trigger an action on your DVR. To setup video tampering detection:

1. Enter Video tampering Management/Settings menu by clicking Menu > Setting > Channel > Video Tampering.

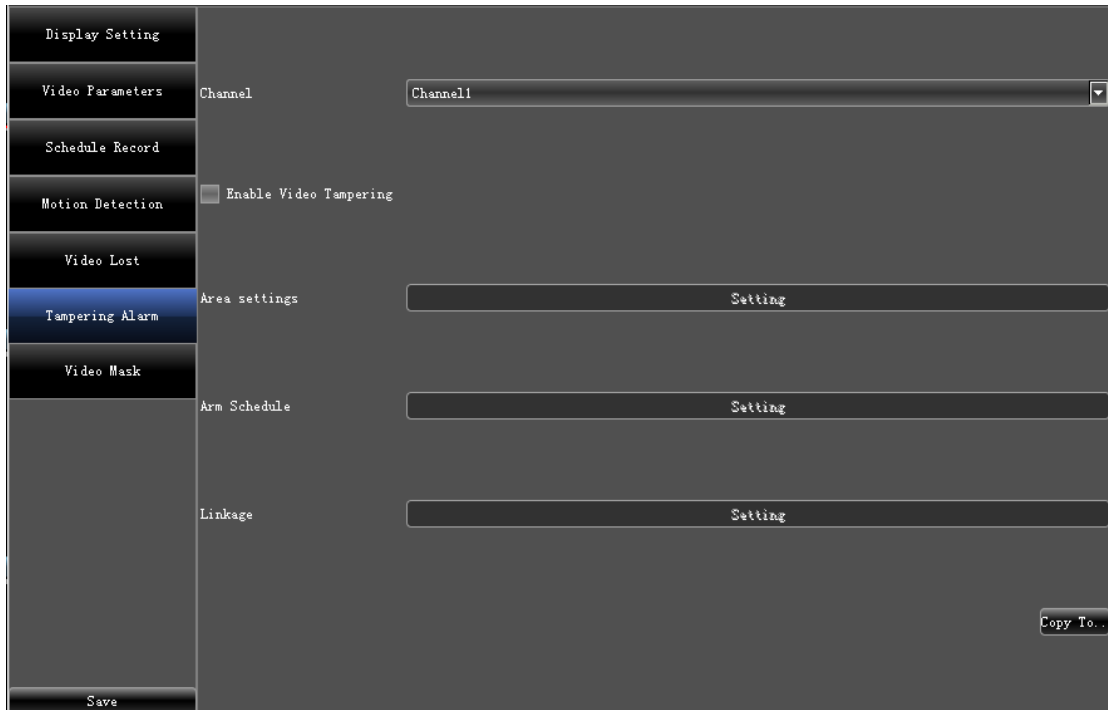


Figure 17

2. Select channel after Channel to configure video loss detection for and click Enable Video Tampering checkbox.
3. Click the Area Settings button to enter the area setup.
4. Setup tampering area, as shown in Figure 18. Only one tampering area can be set, with the full screen being the maximum area.



Figure 18

5. Click OK to return to the Video tampering Settings/Management menu.

Detect Videomask

1. Enter Videomask Management/Settings menu by clicking Menu > Setting > Channel > Videomask.
2. Select channel after Channel to configure videomask detection for and click Enable Videomask checkbox.
3. Click the Area Settings button to enter the area setup.
4. Setup mask area, as shown in Figure 19. Only one mask area can be set, with the full screen being the maximum area.



Figure 19

Setting up Sensor Alarm and Exception

Recordings can also be triggered from an external sensor alarm device. To setup sensor alarms:

1. Enter into the Alarm and Exception Management menu by navigating to Menu > Setting > Alarm > Input, shown in Figure



Figure 20

2. Select the Alarm Input No, shown in Figure 21.

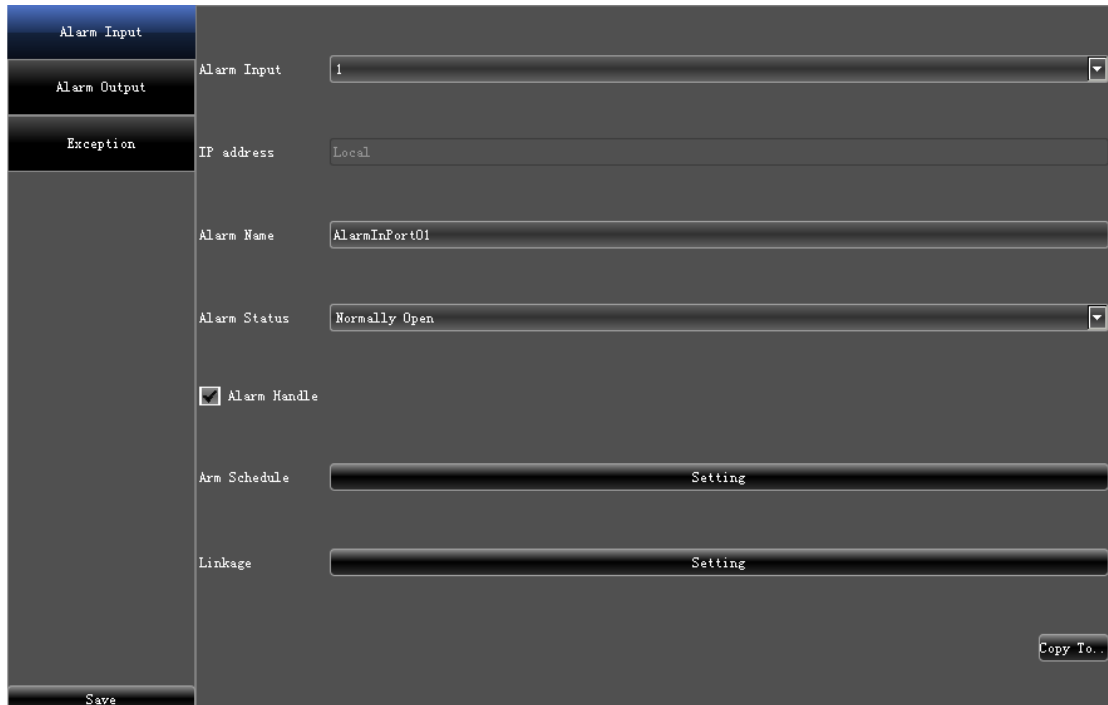


Figure 21

3. Set the alarm input type after status. The options available are Normally Open (N.O.) and Normally Close (N.C.).
4. Click the Alarm Handle button to enter the Alarm Input Handle menu.

5. Click Setting tab after Linkage to enter in alarm in trigger setting.
6. Select cameras to trigger for recording when alarm occurs by checking the checkboxes under the desired channel, as shown in Figure 22.



Figure 22

6. Click the OK button to complete setup.

Triggering Alarm Outputs Manually

You may also trigger alarm outputs manually through the Manual Alarm menu.

To trigger alarm outputs manually:

1. Enter the Manual Alarm menu (Figure 20) by clicking Menu > Setting > Alarm > Output.
2. In the Manual Alarm menu, you may:

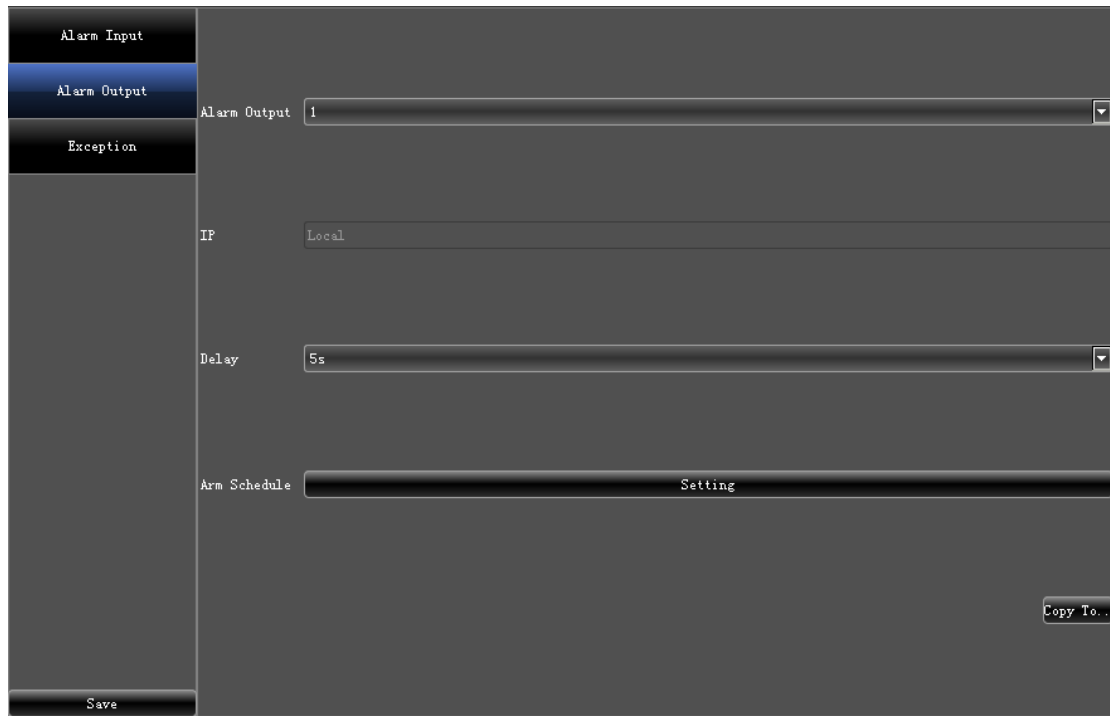


Figure 23

- Trigger: Select an alarm from the list and click Trigger to trigger its output.
 - Trigger All: Trigger all alarm outputs at once.
 - Set delay in second or manual..
3. Select OK to return to the previous menu.

Configuring Network Settings

Network settings must be configured before you're able to use your DVR over the network.

Configuring Basic Settings

To configure basic network settings:

1. Enter the Network Settings menu, shown in Figure 24 by clicking Menu > Setting > Network.



Figure 24

2. Enter General setting by clicking on Net info button, shown in Figure 25:

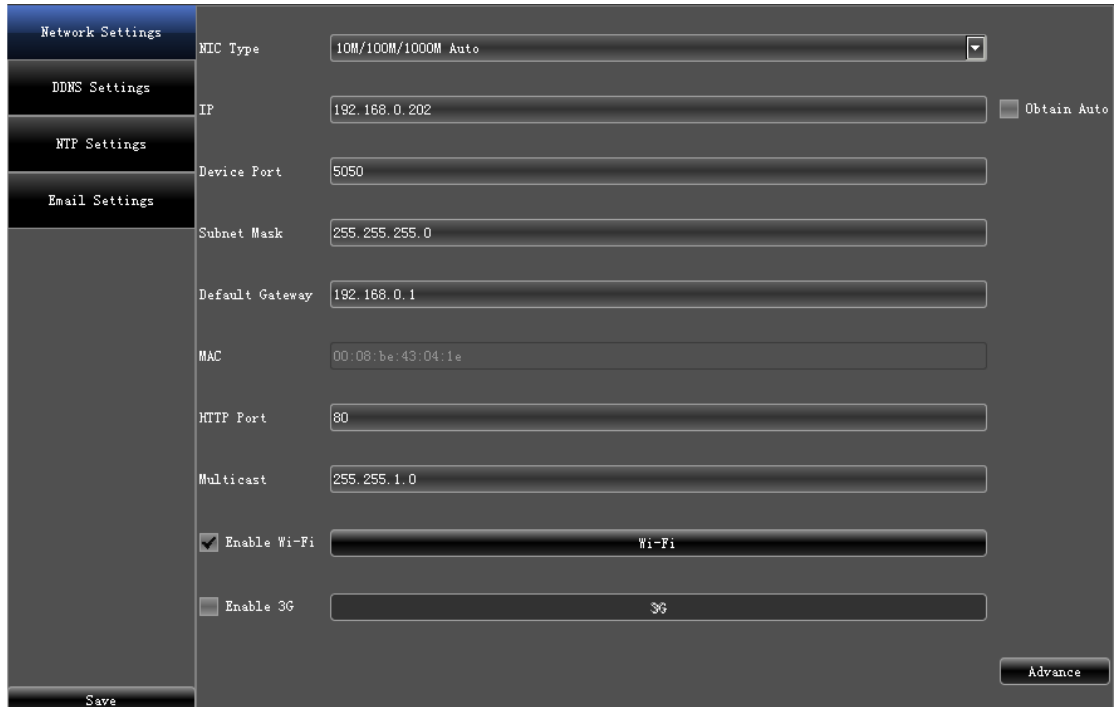


Figure 25

3. If you would like to configure your own settings, enter the settings for:

- IP Address: IP address you would like to use for your DVR. (default ip:192.168.1.188)

- Subnet Mask: Subnet Mask of network.
 - Default Gateway: IP address of your Gateway. Typically the IP address of your router.
4. Click the Enable Wi-Fi and click on Wi-Fi button to enter wi-fi setting.

The screenshot shows a Wi-Fi configuration window with a table at the top and several input fields below. The table has columns for SSID, Security Type, Channel, Signal Strength, and Speed(mbps). Below the table is a 'Refresh' button. The configuration fields include SSID, Password (with a dropdown menu set to 'wep'), IP Obtain Auto, DNS Obtain Auto, IP (192.168.0.189), DNS Server Address1 (192.168.0.1), Subnet Mask (255.255.255.0), DNS Server Address2 (192.168.0.1), and Default Gateway (192.168.0.1). At the bottom are 'OK' and 'Cancel' buttons.

SSID	Security Type	Channel	Signal Strength	Speed(mbps)
------	---------------	---------	-----------------	-------------

Refresh

SSID Password

IP Obtain Auto DNS Obtain Auto

IP DNS Server Address1

Subnet Mask DNS Server Address2

Default Gateway

OK Cancel

Figure 26

5. Click the Enable 3G and click on 3G button to enter 3G setting.

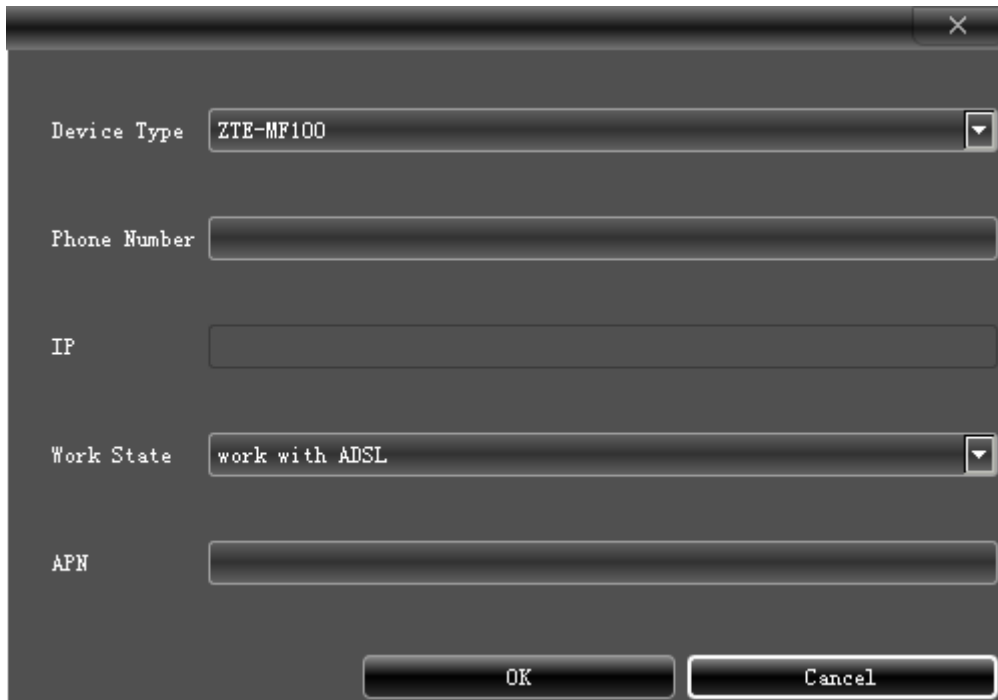


Figure 27

6. Select the Advanced tab. This will take you to the advanced network settings menu, shown in Figure 28:

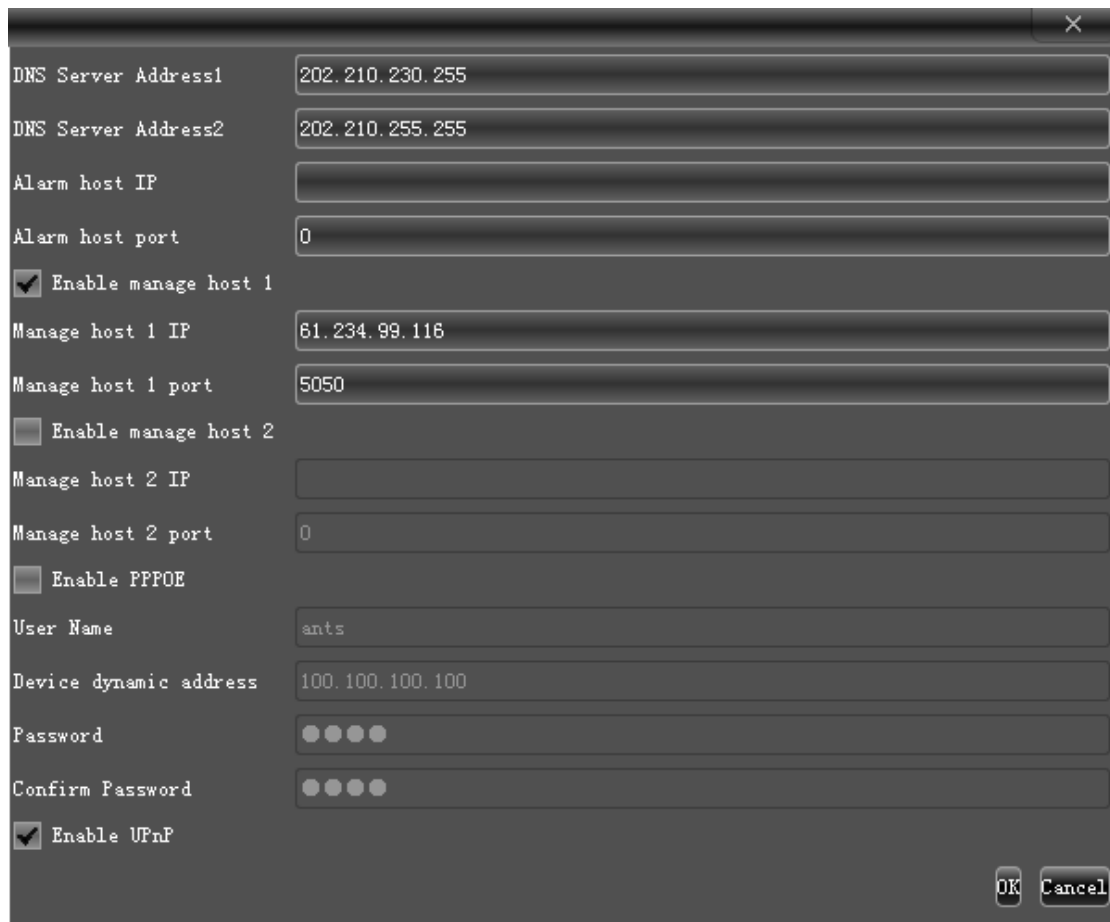


Figure 28


7. Click OK to save and exit the Network Settings menu..

Configuring DDNS

If your DVR is setup to use PPPoE as its default network connection, you may setup Dynamic DNS (DDNS) to be used in conjunction.

To setup DDNS:

1. Enter the Network Settings menu by clicking Menu > Setting > Network > DDNS

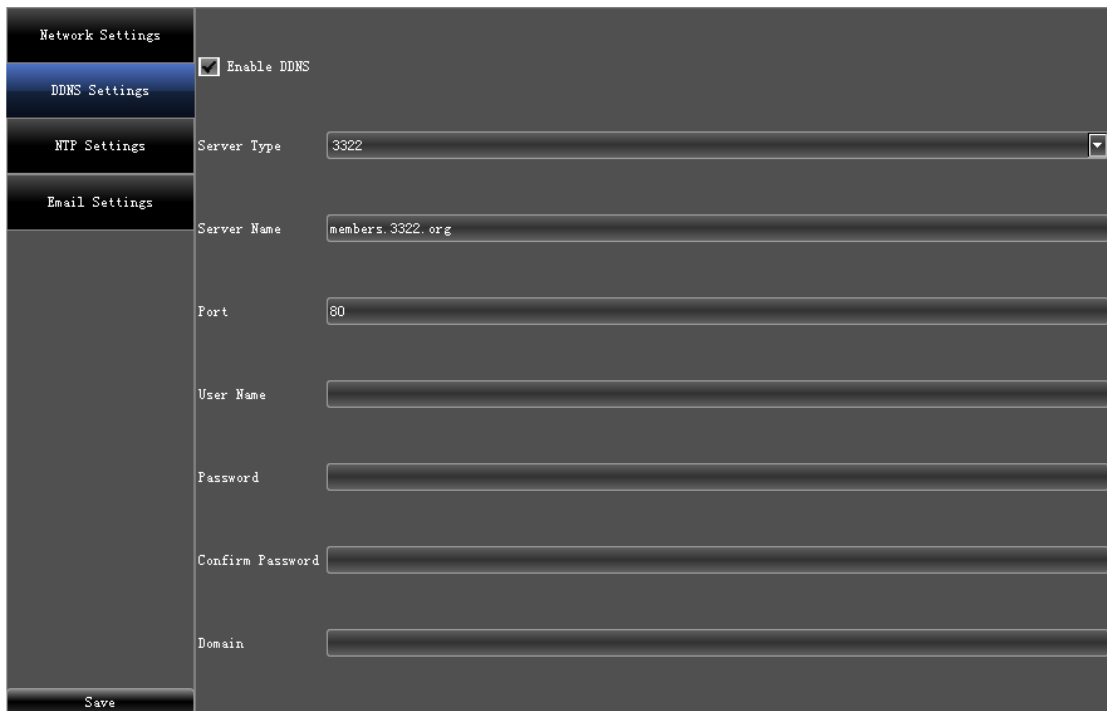

The screenshot shows a web-based configuration interface for DDNS. On the left is a vertical navigation menu with the following items: Network Settings, DDNS Settings (highlighted in blue), NTP Settings, and Email Settings. The main content area is titled 'DDNS Settings' and contains the following fields:

- Enable DDNS
- Server Type: A dropdown menu with '3322' selected.
- Server Name: A text input field containing 'members.3322.org'.
- Port: A text input field containing '80'.
- User Name: An empty text input field.
- Password: An empty text input field.
- Confirm Password: An empty text input field.
- Domain: An empty text input field.

At the bottom left of the main content area is a 'Save' button.

Figure 29

2. Check the DDNS checkbox to enable feature.
3. Select DDNS Type. There are five different DDNS type to choose from, IpServer, PeanutHull, 3322, DynDNS and no-ip(3322 is the only type supported here).

Email Setting

You may also set email sending automatic through the Email Setting, if you have set video motion detection, video lost and alarm in.trigger record..

1. Enter the Email Settings menu, shown in Figure 30 by clicking Menu > Setting > Network > Email.

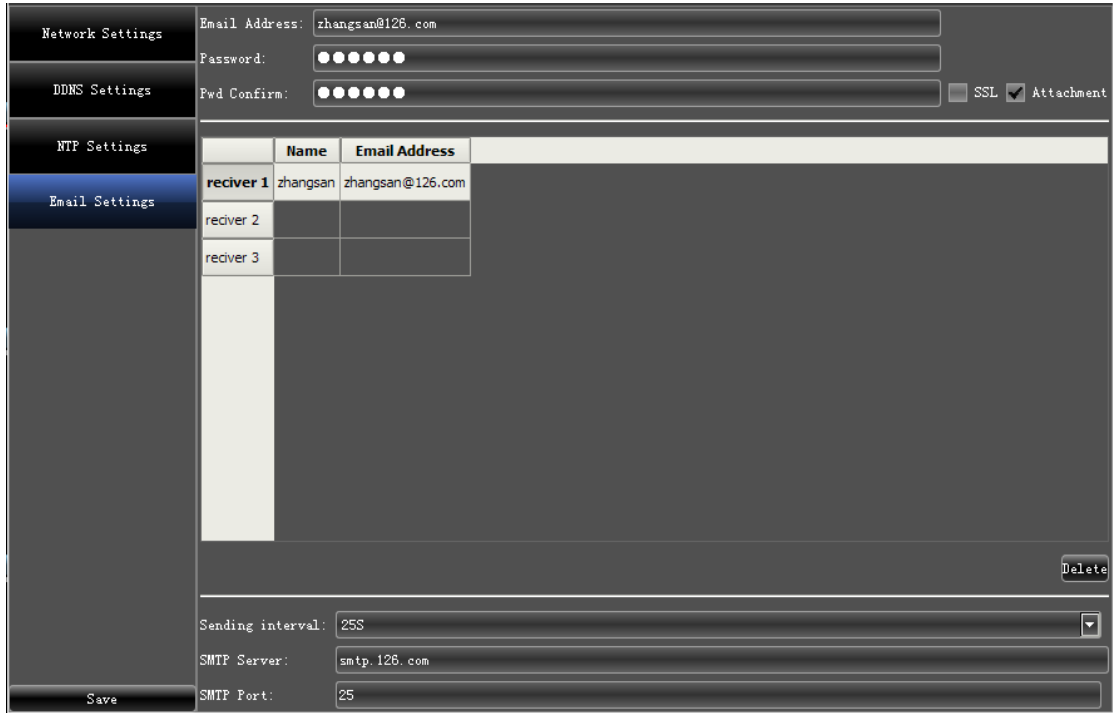


Figure 30

2. Fill in an email account as transmitter and its password upper.
 - .SSL: encrypting the content of the email;
 - .Attachment: attaching the snap pictures of video motion detection, video lost and alarm in.
3. Fill in receiver email address, with three accounts being the maximum number.